TomTom Navigator (PocketPC) POI Installation Guide

Author: POIHandler.com

Version: 1.0

Date : 25 March 2005

This manual was produced by POIHandler.com. Information in this document is subject to change without notice. Companies, names, and data used in examples herein are fictitious unless otherwise noted. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of POIHandler.com.



Contents

| Introduction | |
|-------------------------------------|----|
| Versions | |
| Requirements | |
| Sync Settings at www.poihandler.com | |
| Sync settings for POI Warner | |
| Start Syncing | |
| Activate the warning module | |
| Show overlays on the map | |
| Hit the road | |
| Record a Point of Interest | |
| Feedback | 19 |



Introduction

This manual explains how to install external Point of Interest from POIHandler.com to TomTom Navigator 2 and 3.

Versions

| Version | Date | Author |
|---------|------------|-----------------------------------|
| 1.0 | 25-03-2005 | Marcel Timmermans, POIHandler.com |
| | | |
| | | |

Requirements

You PDA must be connected to the internet. In addition to this you need POI Warner from the firm www.navigating.de and TomTom Navigator version 2 or 3 installed on your PDA.


- Make sure you are registered at <u>www.poihandler.com</u>
- For speedcams a subscription is needed on www.poihandler.com





Sync Settings at www.poihandler.com

The first step is going to www.poihandler.com and login to the website. Select from the left menu "Sync Service POI Warner". This will give you the following screen:

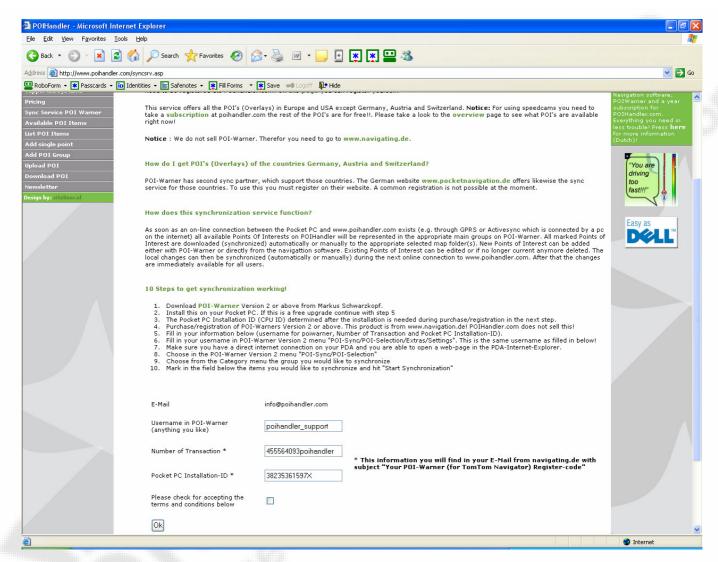

Please fill in the boxes with the correct information. The needed information you will find in the e-mail that is send when you buy POI Warner from the firm www.navigating.de




info@poihandler.com

Check the checkmark for accepting the terms and conditions and press ok.


Sync settings for POI Warner

Start POI Warner.

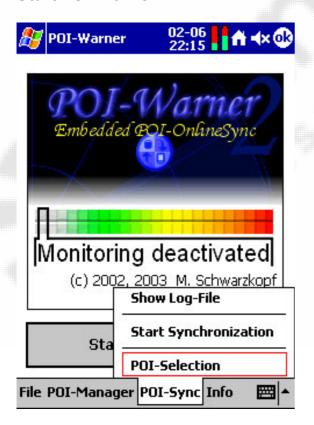


Select POI-Sync/POI-Selection



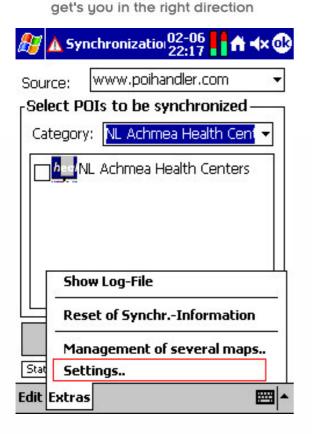

handler.com

Select Settings.. to fill in your username

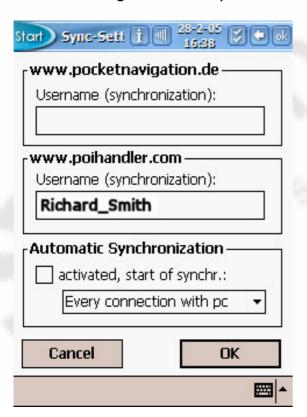


Press ok to continue.



Start Syncing

Start POI-Warner.

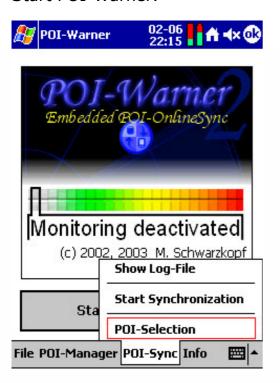

Select POI-Sync/POI-Selection




At this moment the list with Category's will be loaded (This could be very quick and therefore not visible).

www.poihandler.com






Select from the Category the group with POI's you would like to sync.

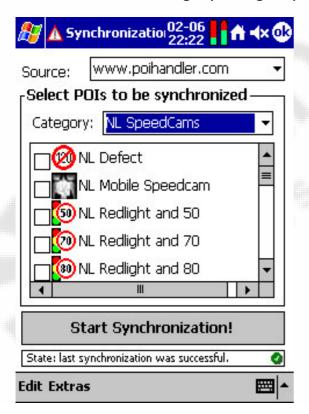


f.e. Speedcams.

www.poihandler.com



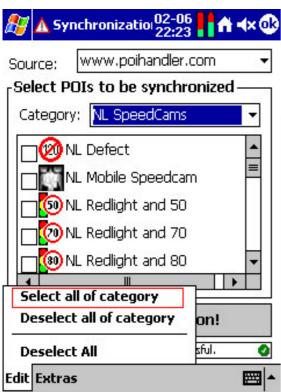


Press Select All of category to sync all items in the group.

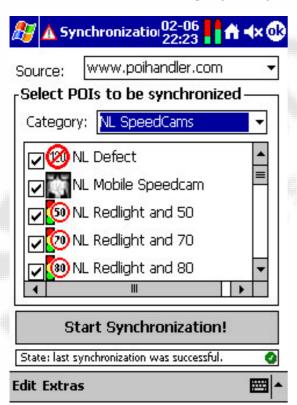

This will select them all. Press "Start Synchronization" to get the items to your PDA and new one to our server.





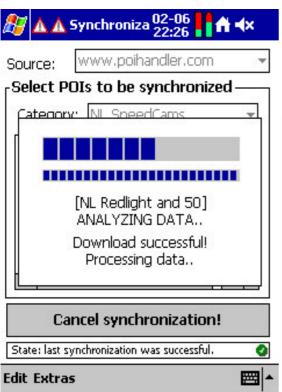


Here you can see that the sync process is running. After finishing the state bar must mention that the sync was successful.

www.poihandler.com




Activate the warning module


Start POI Warner.

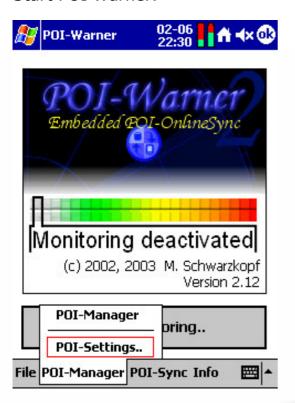


Select POI-Settings from the menu item.

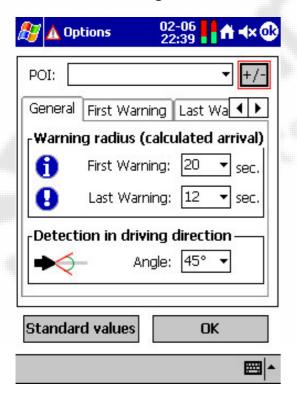

Select the +/- button to add the items to the warning module.

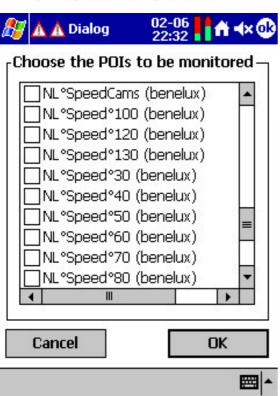

Select from the list the items on which pois you would like to get a warning.

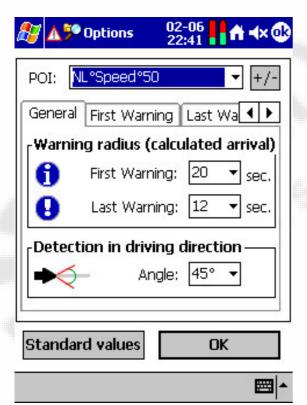

You can fine tune the settings if you like. But the default should be just fine.




Show overlays on the map

Start TomTom Navigator (PocketPC version) and go to the Map display.




Select File / Properties

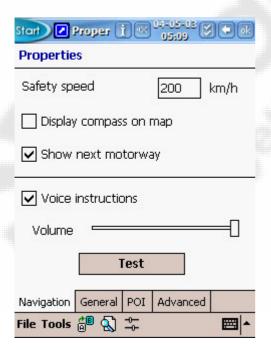


Select the POI Tab



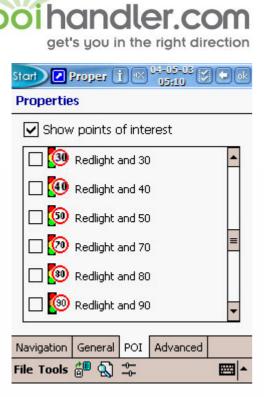


Select the overlays that you would like to be visible on the map.

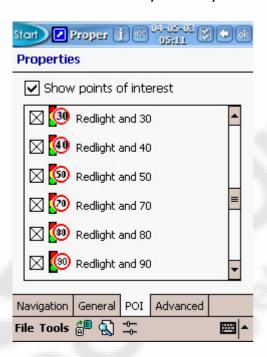

After selecting the overlays press ok in the upper right corner.



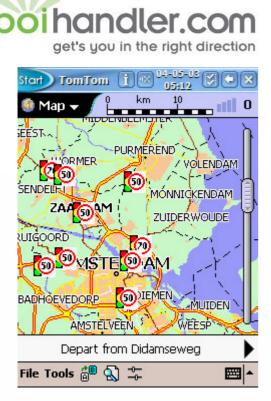


You will see now the POI's on the map.





Hit the road

To activate the warning module and the overlays on the map select start Monitoring.

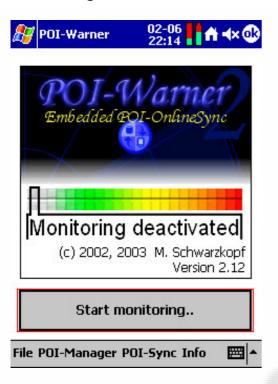

nandler.com

get's you in the right direction




When POI Warner is activated you will see a small green rectangle in the bottom left corner.




Record a Point of Interest

handler.com

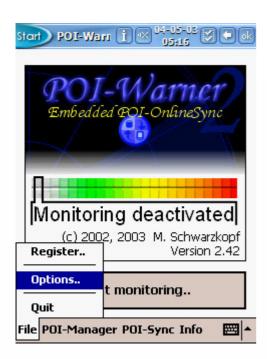


Go to File/Options.. to set the hardware-key for POI Recorder

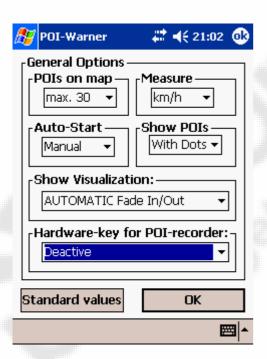

Select the key you would like to have.






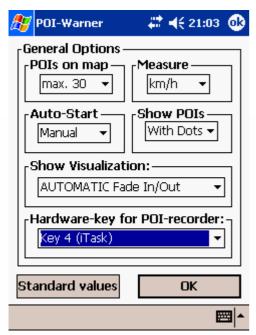

For example select the iTask hardware key.

When you driving on the road and you are facing a interesting POI you can press the hardware key (in this case the iTask button) to start the POI Recorder. A popup screen like below will appear.

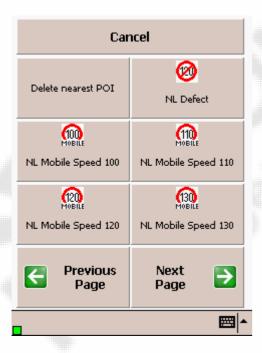


Select the correct group to add the POI to or choose for delete nearest POI if the POI is not correct. With the previous- and next page you can browse to the different pages which contain the different overlay groups.





After pressing a overlay group to add the poi the next screen will pop-up how to record the POI

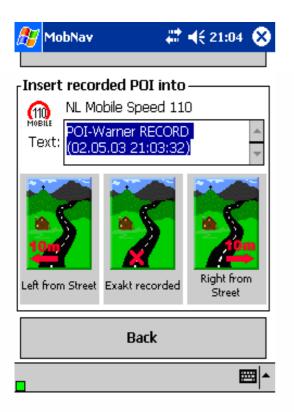

You could change this description and choose the location. In the next sync the POI will be added to our database if the point is correct and not already there.

Feedback

If you find any failures in this document or you have suggestions to improve it please send feedback to support@poihandler.com. Please mention the manual name and version number.